


WOLI

where u left it

CARAVAN AND TRAILER ANTI THEFT DEVICE

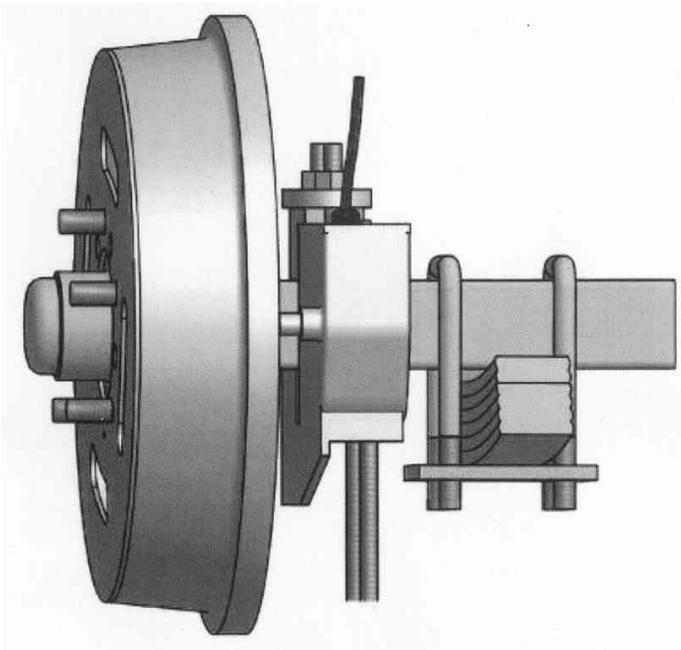

Owner's Manual

TABLE OF CONTENTS

General Instructions And Warnings	3
Safety First.....	4
Your Wuli Anti-Theft System Components.....	4
Installing Your Wuli.....	5
Operating Your Wuli.....	6
Programming Your Remote Control	7
Resetting Your Channel	8
Locking Your Vehicle	9
Unlocking Your Vehicle.....	9
Care And Maintenance Of Your Wuli.....	10
Warranty	11
Troubleshooting.....	15

GENERAL INSTRUCTIONS AND WARNINGS

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

Thank you for purchasing the WULI caravan and trailer anti-theft system. Before attempting to install or operate your new WULI anti-theft system please read these instructions thoroughly. This manual contains safety warnings, precautions, operational hints, maintenance procedures, and a parts list and diagrams intended to ensure the safe, long term, efficient operation of your WULI unit. It is advisable to keep your invoice with these instructions in a safe, dry place for future reference.

WARNING

The warnings, cautions and instructions outlined in this manual cannot cover all possible conditions or situations that may arise. Common sense and caution are factors which cannot be built into any product. It is the operator's responsibility therefore to exercise common sense and caution in relation to this unit.


SAFETY FIRST

Fitting the WULI anti-theft system requires extreme care.

Using incorrect procedures can result in the possibility of property damage, severe personal injury or even death.

WULI therefore recommend that a suitably qualified person such as a trailer manufacturer, trailer repairer or a licensed mechanic be engaged to fit your WULI.

YOUR WULI ANTI-THEFT SYSTEM COMPONENTS

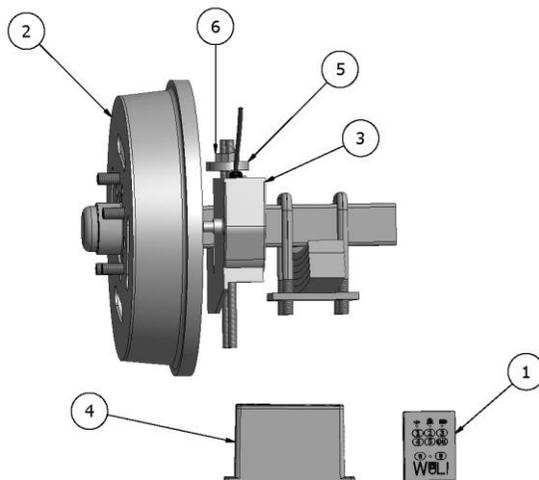

ASSEMBLED UNIT		
ITEM	PART	QTY
1	REMOTE	1
2	FLYWHEEL	1
3	MAINUNIT	1
4	ALARM	1
5	DOUBLE WASHER	1
6	NYLOC NUT	2

INSTALLING YOUR WULI

It is recommended that your device is installed by a suitably qualified person such as a trailer manufacturer, trailer repairer or a licensed mechanic.


The main unit is robust and is able to be submerged for short periods of time.

The alarm unit must not be submerged. Mount the alarm unit in a protected area to avoid emersion as well as stone, rock or debris damage.

Warning: Any attempt to tamper with or disassemble any sealed WULI component will void your warranty.

OPERATING YOUR WULI

Your WULI is operated using a remote control key pad.

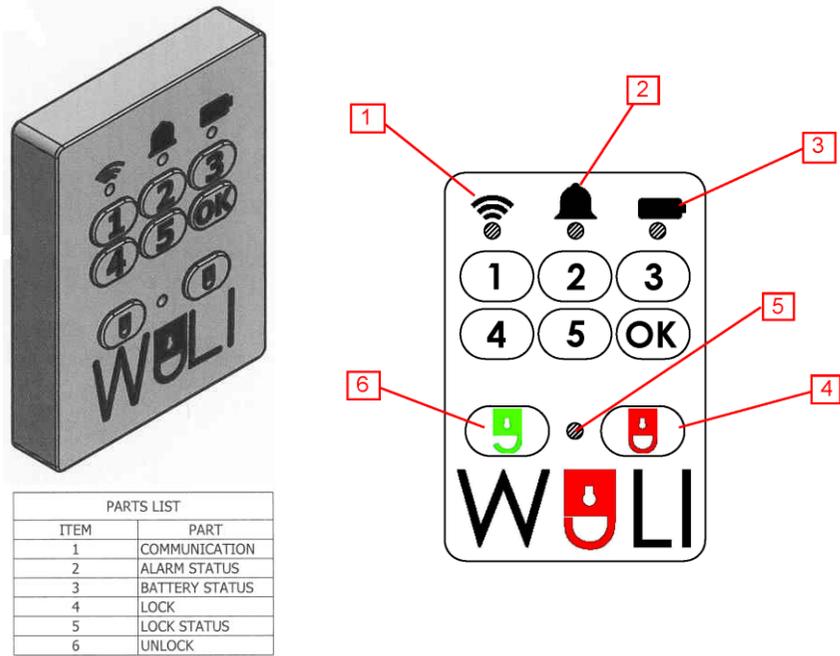

The key pad is supplied with a factory preset PIN code of 1234 on channel 1. It is highly recommended that you change this PIN code to another combination of your choice as soon as your unit is installed. **(Note: Your new PIN is not limited to 4 digits. It may comprise 4-8 digits.)**

The instructions for changing both the user channel and PIN code are contained in the section entitled - Programming your remote control.

Should you accidentally activate your WULI you can deactivate the alarm by entering the PIN code and pressing UNLOCK. You will need to re-enter your PIN code to reset your device.

Your remote uses a single A23 Alkaline battery.

PROGRAMMING YOUR REMOTE CONTROL

Your WULI remote control key pad is supplied pre-programmed with the following settings.

Channel: 1
PIN: 1234

It is highly recommended that you change this PIN code to a 4 - 8 digit combination of your choice, as soon as your unit is installed.

Please read the following instruction fully before you attempt to reset your PIN. **Note: If you forget your PIN at any time it will be necessary to send the main unit back to WULI to be re-set.**

To change your remote's PIN code, follow this simple procedure:

1. Activate the remote key pad by pressing button 1. (This action selects channel 1 on the remote.)
2. Enter the current PIN and press the OK button. (For first time use enter the preset PIN which is 1234.)
3. Check that the green "communication" LED (see page 6) has been activated on the remote keypad
4. Press and hold the OK button for 5 seconds. (all three LEDs on the top row of your remote should now flash green.)
5. Enter your new PIN. (Note: the WULI remote can accept new PINs which are up to 8 digits in length.)
6. Press and release the OK button. (All three LEDs on the top row of your remote should still flash green.)
7. Re-enter your new PIN number, then press and release the OK button. (The LEDs should sequentially flash indicating that your new PIN has been successfully sent to the trailer unit.)
8. Activate the remote key pad again by pressing button 1.
9. Enter your old PIN (or the preset PIN for first time use) and verify that the old PIN no longer works.
10. Enter your new PIN and verify that it works.

RESETTING YOUR CHANNEL

Occasionally you may wish to set your remote to **operate using a different channel**. For example you may have two trailers which are protected by WULI anti-theft units and you wish to use the same PIN for each but still be able to lock and unlock them individually.

By programming each unit to a different channel this is possible.

Please read the following instructions fully before attempting to reset your channel.

To set your PIN to a different channel on your remote, follow this simple procedure:

1. Decide which channel you wish to change to. (You may choose any channel from 1 to 5)
2. Activate your remote key pad and connect to the trailer by using the default channel 1.
3. Enter the previously set PIN.
4. Press and hold the number of the new channel that you wish to set.
5. Whilst this number is depressed, press and release the OK button within the first second.
6. Release all buttons when the LEDS begin to flash yellow. (This should take no more than 5 seconds.)
7. The following LED combination should now be displayed. (This indicates that the channel change was successful.)

Communications: Green

Battery: Green

Alarm: Red

Lock Status: Red

8. Test the change firstly by attempting to connect to the trailer using the new channel and the same PIN code.
9. Repeat the test by attempting to connect to the trailer using the old channel and the same PIN code to ensure that it no longer works.

LOCKING YOUR VEHICLE

To lock your vehicle, follow this simple procedure.

1. Park your caravan or trailer in the desired location ready for locking.
2. Enter your personalized PIN into the remote control and press OK
3. If you have entered your PIN correctly all three LED lights on the top row will turn green. (If all three are flashing red then an incorrect PIN has been entered)
4. Now press the “LOCK” button.
5. The “LOCK STATUS” light on the remote control will turn red and remain red if the vehicle lock is activated successfully.
6. If the “LOCK STATUS” light reverts back to green then the lock has not been activated successfully.
7. If the “LOCK STATUS” light remains green then the most likely cause is that the lock pin is in line with one of the locking lugs on the flywheel. To fix this move the vehicle forwards or backwards slightly and then repeat step 2 above.

To lock with the alarm muted or to permanently mute the alarm

1. Repeat steps 1 – 3 above
2. For a 30 minute “MUTE” of the alarm press “1” or to permanently mute the alarm press “2”
3. Now press the “LOCK” button.

UNLOCKING YOUR VEHICLE

To unlock your vehicle, follow this simple procedure.

1. Enter your personalized PIN using the remote control and press OK, then press the “UNLOCK” button.
2. The “LOCK STATUS” light on the remote control will turn green and remain green when the vehicle is unlocked.
3. Should your Wuli not UNLOCK this may be due to slight movement of your vehicle to hit a lug on the flywheel. On most occasions you need only to move your vehicle slightly to unjam the pin from the lug. On occasion this is not sufficient to unlock the device. Therefore, you may need to LOCK WULI again to unlock it. You do hold the “LOCK” button down until the pin releases.

CARE AND MAINTENANCE OF YOUR WULI

Following the installation of your WULI unit it is advisable to conduct a cautionary check to verify that your trailer or caravan wheel nuts have been tightened correctly and that your indicators and lights are working before you venture onto the roadway.

Pin

To maintain your WULI in a good operating condition, the locking pin should be greased regularly, even if never exposed to salt water. To grease the locking pin, engage the lock, then manually cover the extended lock pin with a thin layer of waterproof grease, then unlock the unit which retracts the pins. Lock the unit again and check that the entire surface of the extended locking pin has a covering of fresh grease. If necessary, repeat this procedure to ensure complete coverage.

If an attempt is made to drive your trailer or caravan with the locks engaged (either accidentally or during an attempted theft), then the unit can sustain damage.

Visually check the unit for damage and if the unit appears to be undamaged perform a trial lock and unlock sequence to ensure that the unit is still operating correctly

If a problem is identified, an authorized WULI agent or installer will be able to advise you on the best corrective action.

Batteries

Your Wuli is powered by the latest Lithium technology. Your device comes partially charged. If you are intending to use your device in the near future a short charge (10 minutes) will suffice. However, if you intend to leave Wuli sitting dormant for an extended period upon installation you should fully charge it. To achieve full charge your no motorised vehicle should be connected to your tow vehicle with the headlights on for approximately three hours. Once fully charged it should not require recharging for about six to eight months, depending upon the number of activations.

From time to time the batteries in the remote will require replacing. Remove the screw at the back of the remote using a Philips head screwdriver, remove back cover, remove flat battery and replace with A23 battery. Ensure you put the positive and negative ends of battery in the correct way. Replace cover and tighten screw.

Alarm

The alarm unit and remote must never be submerged.

Main unit

The main unit has been developed to tolerate a harsh environment, however if the unit is immersed in salt water or towed along a beach, it should be hosed off with fresh water as soon as possible. (**WARNING: Do not use a pressure washer on the main unit or on the alarm unit**). Failure to do this will void your warranty. If you intend to use Wuli in this environment, you may like to consider using a lanolin spray as another layer of protection.

If multiple Wuli devices are in close proximity the signal to your remote is designed to require you to stand closer to your device to activate.

WARRANTY

Wuli comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. To ensure the integrity of our product for warranty purposes Wuli has components that are not to be tampered with. **“VOID IF REMOVED”** stickers have been installed to ensure users are aware of this. Please note if these seals are damaged Wuli Pty Ltd will not recognise any claim under warranty.

You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. The Standard Warranty Care period is 12 months.

You are required to register your purchase with Wuli Pty Ltd within 90 days of purchase via our website, email info@wuli.com.au or by calling us during business hours.

You will be requested to return the item to an authorised stockist. You will bear the responsibility for safely packaging your device for transport. Wuli Pty Ltd accepts no liability for any damage that may occur in transit.

Proof of purchase (invoice or paid Order confirmation) must be provided when requesting service under the Standard Care Warranty.

The Customer is responsible to inspect all goods received from Wuli Pty Ltd upon arrival. In instances where goods have been damaged in transit, the Customer must report this to Wuli Pty Ltd within 3 days of receipt of the product. Failure to report physical damage on arrival within 3 days of receipt may result in denial of warranty for physical damage.

Wuli Pty Ltd requires any customer requesting service under the Standard Care Warranty to comply with directions from Wuli Pty Ltd staff or authorised representatives in relation to troubleshooting any issue and facilitating any repair or replacement under these Warranty Terms and Conditions.

Where the product is faulty or damaged upon delivery, photographic evidence of the damage must be submitted to Wuli Pty Ltd via email at info@wuli.com.au before the Product will be repaired or replaced in accordance with these terms.

Wuli Pty Ltd reserves the right to replace or repair the Product. Wuli Pty Ltd may replace parts with refurbished parts.

If Wuli Pty Ltd is unable to repair or replace the Product, the customer will be provided with refund for the amount of the purchase price of the Product. Please note that the faulty item will become the property of Wuli Pty Ltd

Where Wuli Pty Ltd authorises warranty service of a Product, Wuli Pty Ltd will organise for our authorised courier to pick up the Product during business hours (between 9am and 5pm, Monday to Friday) and deliver it to the appropriate authorised repair centre, provided that the Product is safely

and securely packaged for safe transport. If Wuli Pty Ltd deems it appropriate, we may alternatively supply a pre-paid postage label for the Product to be returned via our chosen carrier to the authorised repair centre. In this situation Wuli Pty Ltd will cover the cost of transport of the serviced Product to and from the Customer. Alternatively, the Customer may take the Product to the appropriate repair centre for service if Wuli Pty Ltd specifically authorises the Customer in writing to do so. Alternately, the Customer may post the Product as directed by Wuli Pty Ltd if Wuli Pty Ltd specifically authorises the Customer in writing to do so, in which case Wuli Pty Ltd will refund the Customer the cost of the postage on provision of a scanned copy of the postage receipt.

Standard Care Warranty of products purchased from Wuli Pty Ltd do not apply:

1. To parts such as batteries or protective coatings which naturally and reasonably have a diminishing performance over time, unless failure has occurred due to a defect in materials or workmanship;
2. to cosmetic damage, to boxes, packaging or exterior surfaces (including during transit);
3. to damage caused by use with another product;
4. to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external cause;
5. to damage caused by operating the Product outside any guidelines published for use;
6. to damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Wuli Pty Ltd;
7. to a Product that has been modified to alter functionality or capability without the written permission of Wuli Pty Ltd;
8. to defects caused by normal wear and tear or otherwise due to the normal ageing of the Product,
9. if any serial number has been removed or defaced from the Product,
10. if the product is stolen or Wuli Pty Ltd reasonably believes that the product is stolen based on information provided by law enforcement authorities, or
11. Where proof of purchase (invoice or paid Order confirmation) cannot be provided.

12. if the Product has not been installed, operated, maintained or used in accordance with the manufacturer's instructions or specifications provided with the Product
13. if the “void if removed” labels have been removed or tampered with.

Replacement of the Product or a part under Standard Care Warranty does not extend or restart the Standard Care Warranty period.

Wuli Pty Ltd may seek reimbursement of any costs incurred where the Product is found to be in good working order, or when it has been determined that the Standard Care Warranty does not apply.

TROUBLESHOOTING

Problem	Cause
The top three LED lights on my remote flash red when I enter my PIN	An incorrect PIN has been entered
The “Lock Status” light on my remote flashes red but then turns green	WULI has been unable to lock. Move the vehicle forwards or backwards slightly then attempt to re lock.
The alarm light on my remote has turned red	Your alarm has been activated. Check your vehicle.
The battery light on my remote has turned red	The main battery requires immediate charging. The battery is charged via your trailer plug. Regular ten minute drives are usually enough to top up your battery. A three hour drive may be necessary to completely recharge a fully flat battery.
My remote will not operate	Replace the battery in the remote with a single A23 battery.
The alarm has accidentally activated	Wuli has a mute feature simply enter the PIN code and press UNLOCK, this will stop the alarm. You will need to re-enter your PIN code to relock your device.